

## WALKABOUT

### FRONT PANEL

CHANNEL 1		
Control Function	Type	Mesa Part#
Active	Jack	618102
Passive	Jack	618102
Gain	Pot	593148
	Knob	408114
Bass	Pot	592151
	Knob	408114
Middle	Pot	593737
	Knob	408114
Treble	Pot	593151
	Knob	408114
DI Level	Pot	593151
	Knob	408114
Master	Pot	593151
	Knob	408114

MISC PARTS		
Control Function	Type	Mesa Part#
<b>Semi-Parametric EQ</b>		
Frequency (3)	Pot	592155
	Knob	408114
Level (3)	Pot	592379
	Knob	408114
<b>Pilot Light</b>		
	Light	703047
	Lens	703782
	Holder	703850
Power	Switch	602110

### REAR PANEL

MISC PARTS		
Control Function	Type	Mesa Part#
<b>Fuse Holder</b>		
Domestic	Cap/Holder	790347
	Fuse	790625
Export	Cap/Holder	790346
	Fuse	795300
AC Receptacle	Jack	613713
<b>Direct Out</b>		
Level	Pot	593150
	Knob	408004
Post/Pre	Switch	607101
Ground Lift	Switch	607101
XLR	Jack	620550
<b>FX Loop</b>		
Send	Jack	618356
Return	Jack	618356
Speaker Outs (2)	Jack	618356